

# Electric Pumps HHB-700T

## Instruction Manual

**Pressure Rating 700bar /10,000 PSI  
(for single acting applications only)**



*This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.*

## SAFETY AND GENERAL INFORMATION

**Save these instructions.** For your safety, read and understand the information contained within. The owner and operator shall have an understanding of this product and safe operating procedures before attempting to use this product. Instructions and safety information shall be conveyed in operator's native language before use of this product is authorized. Make certain that the operator thoroughly understands the inherent dangers associated with the use and misuse of the product. If any doubt exists as to the safe and proper use of this product as outlined in this factory authorized manual, remove from service immediately.

**Inspect before each use.** It is recommended that, prior to each use, an inspection be done by qualified personnel and that any missing or damaged parts, decals, warning / safety labels or signs be replaced with factory authorized replacement parts only. Any pump that appears to be damaged in any way, is worn, leaking or operates abnormally shall be removed from service immediately until such time as repairs can be made. Any pump that has been subjected to a shock load (a load dropped suddenly, causing the system pressure to exceed 10,000 PSI), shall be removed from service immediately until checked by qualified personnel. Owners and operators of this equipment shall be aware that the use and subsequent repair of this equipment does require special training and knowledge.

## PRODUCT DESCRIPTION

This Pump is engineered to meet most industrial standards for Performance and Safety. Its allows quick displacement of hydraulic fluid under no load conditions and easy pumping in loaded conditions. This electric hydraulic pump supplies compressed hydraulic fluid to compatible **single acting applications ONLY**. Such applications include rams, presses, spreaders, compactors and crimping machines, anywhere that 10,000 PSI of single acting fluid pressure is needed. Special skill, knowledge and training may be required for a specific task and the product may not be suitable for all the jobs described above. Unsuitable applications would include applications that call for a device to move, level or support persons, animals, hazardous materials, mobile homes/dwellings in general, mirrors and/or plate glass, and/or to connect/secure hatches, components, etc. between bulkheads. The user must make the decision regarding suitability of the product for any given task and assume the responsibility of safety for himself/herself and others in the work area.



# DANGER



### TO AVOID ELECTROCUTION HAZARD:

- Owner, Operator must read, understand and follow all printed material provided with this device before use.
- Connect **ONLY** to properly grounded electrical source. Connect to GFI outlet **ONLY**! For use in dry locations.
- Avoid the use of extension cords.
- Do not operate this device in an explosive atmosphere or in the presence of conductive liquids.



## WARNING

- Read, understand, and follow all instructions provided with and on this device before use.
- All WARNING statements must be carefully observed to help prevent personal injury.
- No alteration shall be made to this device.
- **Always wear protective gear when operating hydraulic equipment. Tie up long hair, wear eye and ear protection, and non slip foot wear.**
- **Keep hydraulic equipment away from flames and heat. Hydraulic fluid can ignite and burn. Do not operate if leaks are detected.**
- **Crush Hazard. Keep hands and feet away from loading area. Avoid pinch points or crush points that can be created by the load, cylinder, or system components.**
- **To avoid crushing and related injuries:**  
NEVER work on, under or around a lifted load before it is supported by appropriate mechanical means. Never rely on hydraulic pressure alone to support load.


### HYDRAULIC PUMPS

- The user must be a qualified operator familiar with the correct operation, maintenance, and use of pumps. Lack of knowledge in any of these areas can lead to personal injury.
- Do not exceed rated capacity of the pump or any equipment in the system.
- Never attempt to lift a load weighing more than the capacity of the output device (cylinder, spreader etc.)
- Do not subject pump and its components to shock loads.
- Burst hazard exists if hose or connection pressure exceeds rated pressure.
- Inspect pump, cylinder, hoses and connections before each use to prevent unsafe conditions from developing. Do not use if they are damaged, altered or in poor condition. Do not operate the system with bent or damaged coupler or damaged threads.
- Never hold or stand directly in line with any hydraulic connections while pressurizing.
- ALWAYS use gauge or other load measuring instrument to verify load.
- Never attempt to disconnect hydraulic connections under pressure. Release all line pressure before disconnecting hoses.
- Use of incorrect power source will damage the motor.
- Do not use an ungrounded (two-prong) extension cord.
- Do not install, remove or rewire the motor with power applied. Have qualified technician to install, adjust and service the motor.

- Do not operate this device in an extreme temperature, explosive atmosphere or in the presence of conductive liquids.
- Always inspect hoses and connections for damage prior to use.
- Ensure the device is placed on a hard, level surface.
- Ensure that application is stable to work on and around.
- Use only approved accessories and approved hydraulic fluid.
- Never attach ANY component not authorized by manufacturer.
- Do not connect to application which can return more oil to the reservoir than the pump reservoir can hold.
- Do not connect pump to hydraulic system powered by another pump.
- This device is not suitable for use as support device! As the system load is lifted, use blocking and cribbing to guard against a falling load.
- All personnel must be clear before lowering load or depressurizing the system.
- Never try to disassemble a hydraulic pump, refer repairs to qualified, authorized personnel.

### HYDRAULIC HOSES & FLUID TRANSMISSION LINES

- Avoid short runs of straight line tubing. Straight line runs do not provide for expansion and contraction due to pressure and/or temperature changes.
- Reduce stress in tube lines. Long tubing runs should be supported by brackets or clips. Before operating the pump, tighten all hose connections with proper tools. Do not overtighten. Connections should only be tightened securely and leak-free. Overtightening can cause premature thread failure or high pressure fittings to burst.
- Should a hydraulic hose ever rupture, burst or need to be disconnected, immediately shut off the pump and release all pressure. Never attempt to grasp a leaking pressurized hose with your hands. The force of escaping hydraulic fluid can inflict injury.
- Do not subject the hose to potential hazard such as fire, sharp objects, extreme heat or cold, or heavy impact.
- Do not allow the hose to kink, twist, curl, crush, cut or bend so tightly that the fluid flow within the hose is blocked or reduced. Periodically inspect the hose for wear.
- Do not pull, position or move setup by the hose.
- Hose material and coupler seals must be compatible with hydraulic fluid used. Hoses also must not come in contact with corrosive materials such as battery acid, creosote- impregnated objects and wet paint. Never paint a coupler or hose.
- **FAILURE TO HEED THESE WARNINGS MAY RESULT IN PERSONAL INJURY AS WELL AS PROPERTY DAMAGE.**

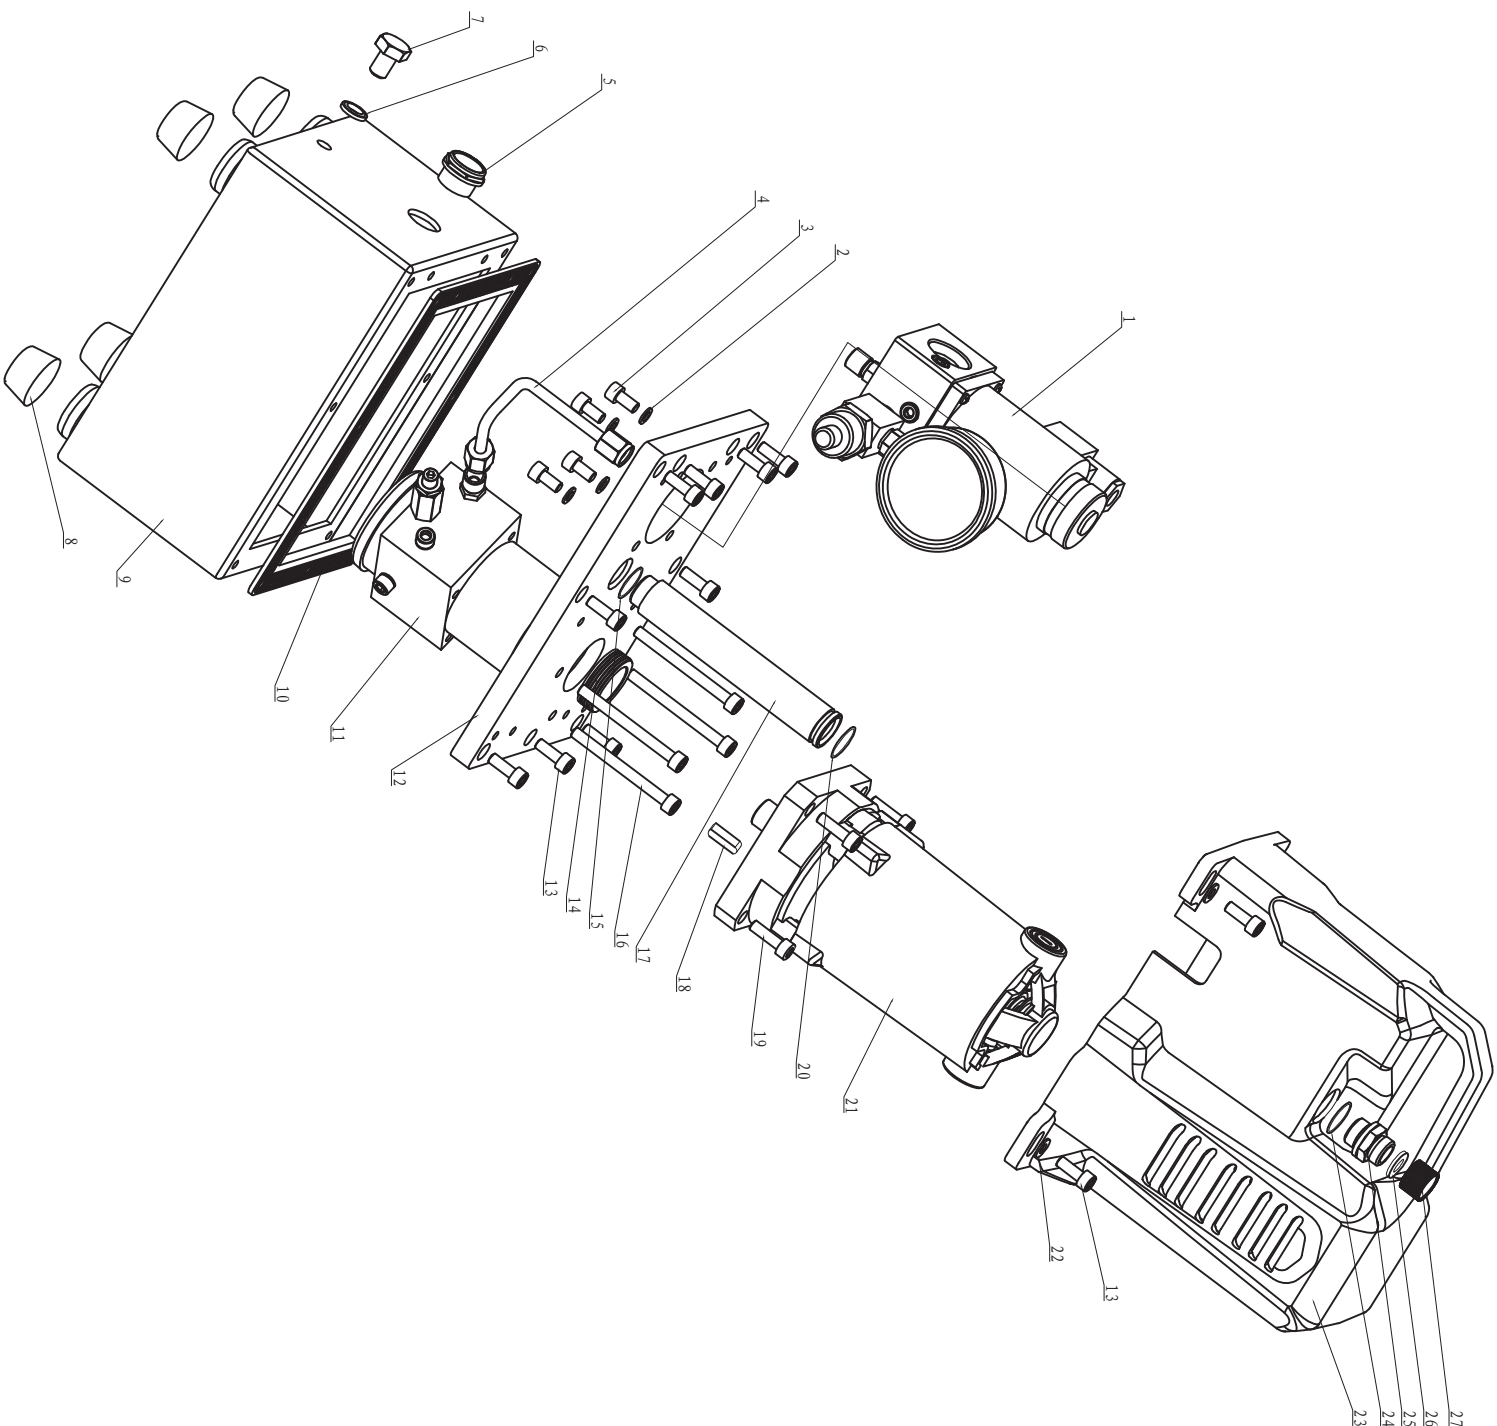

## Part List

Part No.	Part Name	Qty
1	Solenoid valve assy	1
2	Copper washer	4
3	Hex screw M6x12	4
4	Steel tube assy	1
5	Oil level indicator	1
6	Bonded washer	1
7	Hex bolt	1
8	Foot pad	4
9	Tank	1
10	Gasket	1
11	Oil pump assy	1
12	Panel	1
13	Hex screw M6x16	13
14	Skeleton oil seal	1
15	O-ring 16x2	1
16	Hex screw M6x60	4
17	Oil tube	1
18	Flat key	1
19	Hex screw M6x20	4
20	O-ring 18x2	1
21	Motor	1
22	Flat washer 6x13x2	4
23	Plastic cover	1
24	O-ring 14x2	1
25	Vent valve assy	1
26	Flat washer 14x7x2	1
27	Vent nut	1

## TECHNICAL SPECIFICATIONS

Pressure rating: 20 bar at 1st stage, 700 bar at 2nd stage  
Output flow rate: 4 l/min at 1st stage, 0.5/min at 2nd stage  
Valve type: 3-way, 2-position, solenoid  
Valve function: Advance/Hold/Retract  
Motor 220V/50HZ  
Usable oil capacity 2 liters  
Used with single-acting hydraulic cylinders and tools

## BEFORE USE

Read, understand, and follow all printed materials carefully before attempting to assemble or operate these pumps.

**NOTICE:** *Electric Pumps are shipped dry. Add oil before use.*

### Electrical Connections:

Compare motor nameplate against power availability to prevent motor burnout and dangerous electrical overloading.

**DANGER:** *Motor, connections and remote on/off switch are energized components containing line voltage. Ensure supply is grounded and GFI protected.*

### Hydraulic Connections:

1. Make sure to use the hydraulic oil specified by the manufacturer. Ensure oil level in reservoir is ~ 2" from top of reservoir plate, with cylinders retracted and motor off.
2. Use of pressure gauge is strongly recommended. Attach a pressure gauge between the pump and cylinder to monitor pressure on cylinder.
3. Make sure coupler, hose, valve, gauge are tighten securely to prevent accidental removal of components while in use. Hoses must not be kinked or twisted.

**NOTICE:** *Always secure threaded port connections with non-hardening pipe thread compound. Take care not to introduce compound into port orifices.*

To ensure smooth operation, bleed air from the system by fully advancing and retracting the cylinder several times.

4. Do not exceed the rated capacity of the equipment connected to the pump. Ensure that all hydraulic equipment used with this pump is rated at 700bar/10,000 psi.

## OPERATION

### WARNING:

ALWAYS monitor pressure, force and load position. Pressure may be monitored by means of an optional manifold and gauge. Force may be monitored by means of a load cell and digital indicator. Correct application position can only be determined by the operator of the equipment.

1. Check oil level, add oil if necessary.
2. Make sure system fittings and connections are tight and leak free.
3. Plug in the pump to power supply 110V/50HZ.
4. To START the motor: Toggle the remote pendant switch to UP position.
5. It is recommended to leave the pump idling for a few minutes before putting into operation.
6. Use the remote pendant switch to control the direction of fluid flow.
7. Always monitor the pressure, load and position.
8. Do not exceed the rated capacity of the equipment connected to the pump. To **reduce** system component stress, material fatigue, and the risk of personal injury and property damage, **never** load a hydraulic application (cylinder, spreader, etc.) to more than 80% of its rated capacity.
9. Operate the pump until the desired pressure, load or position is reached. **Note:** Do not continue to operate pump after cylinder plunger is fully extended or retracted.
10. To **turn off** the motor: Toggle the remote pendant switch to 'DOWN' position.
11. Depressurize all connections before disconnect.

# TROUBLESHOOTING

A system failure may or may not be the result of a pump malfunction. The following information is intended to be used as an aid in determining if a problem exists. Pumps should be repaired only be repaired by qualified processionalals.

Symtom	Possible Causes	Corrective Action
Motor will not start	<ul style="list-style-type: none"><li>•No power or wrong voltage</li><li>•Damaged power cord</li><li>•Tripped circuit breaker</li><li>•Loose or faulty wiring</li></ul>	<ul style="list-style-type: none"><li>•Check the power supply &amp; voltage</li><li>•Contact Customer Service</li><li>•Ensure electrical supply is adequate</li><li>•Contact Customer Service</li></ul>
Erratic cylinder action	<ul style="list-style-type: none"><li>•Air in system or pump cavitation</li><li>•External leak</li><li>•Internal hydraulic leak</li></ul>	<ul style="list-style-type: none"><li>•Follow pump instructions for bleeding air</li><li>•Tighten all connections</li><li>•Contact vendor or service provider</li></ul>
Pump fails to maintain pressure	<ul style="list-style-type: none"><li>•External leak</li><li>•Internal hydraulic leak</li><li>•Pump or valve malfunction</li></ul>	<ul style="list-style-type: none"><li>•Tighten all connections</li><li>• Contact vendor or service provider</li></ul>
Cylinder extends partially	<ul style="list-style-type: none"><li>•Hydraulic oil level too low in pump</li><li>•Load is above the capacity of system</li><li>•Cylinder is sticking or binding</li></ul>	<ul style="list-style-type: none"><li>•Fill and bleed the system</li><li>•Use the correct equipment</li><li>• Contact vendor or service provider</li></ul>
Cylinder moves slower than normal	<ul style="list-style-type: none"><li>•Loose connection or coupler</li><li>•Restricted hydraulic line or fitting</li><li>•Pump not working correctly</li><li>•Cylinder seals leaking</li></ul>	<ul style="list-style-type: none"><li>•Tighten</li><li>•Clean and replace if damaged</li><li>•Check pump operating instructions</li><li>•Replace cylinder</li></ul>
Cylinder leaks hydraulic fluid	<ul style="list-style-type: none"><li>•Worn or damaged seals</li></ul>	<ul style="list-style-type: none"><li>•Replace cylinder</li></ul>
Cylinder will not retract or retracts slower than normal	<ul style="list-style-type: none"><li>•Loose couplers</li><li>•Weak or broken retraction springs</li><li>•Cylinder damaged internally</li><li>•Pump reservoir too full</li></ul>	<ul style="list-style-type: none"><li>•Tighten couplers</li><li>•Replace cylinder</li><li>•Replace cylinder</li><li>•Drain hydraulic fluid to correct level</li></ul>
Motor cuts out	<ul style="list-style-type: none"><li>•Extension cord too long</li><li>•Faulty motor</li><li>•Overheated motor trips circuit breaker</li></ul>	<ul style="list-style-type: none"><li>•Replace</li><li>•Replace or repair</li><li>•Allow motor to cool, reset circuit breaker</li></ul>

# MAINTENANCE

1. Keep areas around pump unobstructed in order to provide good air flow around the motor and pump. Try keep the motor and pump as clean as possible.
2. Inspect hoses and connections daily. Replace damaged components immediately.
3. Tighten connections as needed. Use non-hardening pipe thread compound when servicing connections.
4. Check hydraulic oil level every 24 hours of operation. Add hydraulic oil if necessary.
5. Completely change the hydraulic oil every 240 hours of operation. Change the oil more frequently when pump is used in an extremely dusty environment or when the oil has been overheated. Use only good quality hydraulic oil. HV15 low condensing hydraulic oil is recommended. **Use of other hydraulic oil may result in pump failure and will void warranty.**

## Adding Hydraulic Oil

- ✧ Make sure the electric motor is plug off.
- ✧ Depressurize and disconnect hydraulic hose from application.
- ✧ Remove the vent cap(part #27).
- ✧ Use a funnel to fill reservoir to the oil level indicator(part #5)
- ✧ Wipe up any spilled fluid and reinstall the vent cap.

## Changing Hydraulic Oil

- For best results, change hydraulic oil every 3 months.
- Remove drain plug(part #7), tilt the pump then pour used fluid into a sealable container.
- Dispose the hydraulic oil in accordance with local regulations.
- Fill hydraulic oil, then reinstall vent cap.

## Cleaning

Clean oil filter screen periodically with nonflammable solvent, then blow dry before reassemble back to pump.

## Storage

- ◆ When not in use, depressurize and disconnect hydraulic hoses from application.
- ◆ Wipe clean, thoroughly.
- ◆ Store in clean, dry environment. Avoid temperature extremes.
- ◆ For transportation or long term storage, shield pump with a protective cover.