

1075 - RESCUE / STRETCHER CAGE



The 1075 stretcher cage is supplied as a crane evacuation cage for use where a casualty needs to be evacuated from height. Suitable for 2 personnel (1 casualty and 1 attendant) and supplied in white with relevant signage. Each unit is supplied complete with four leg chain sling (rated at 10/1 ratio as required by CE regulations) attached to the main lifting points with connectors.

Capacity	Width	Length	Height	SWL	Weight
2 Man	770 mm	2570 mm	2130 mm	250Kg	450Kg

Eichinger Equipment Ltd
69-73 James Road, Frimley, Camberley, GU15 2RH
T: 01276 605 970 F: 01276 682 913 E: sales@eichinger.co.uk

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact Eichinger Equipment Ltd.

Ensure the equipment is adequate for the job you need to carry out.

You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell.

A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment:

Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest

We also suggest suitable clothing should be worn.

Familiarise yourself with the equipment, its use and how it works!

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment.

Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

Crane Use:

Ensure the chain sling being used to lift the unit is of the correct rating and is full certified. A chain is supplied with this cage and we suggest that all chains for personnel cages are used only for this specific purpose.

Intended personnel should only attempt to enter the unit when it is full grounded and have been given the "all-clear" from the crane operator or banks man.

The door can be lifted in an 'up and over' fashion.

Once the intended users are in the unit ensure the door is fully closed. If personnel are wearing harnesses and lanyards attach the lanyard to the overhead anchor points.

Always ensure that the load being lifted (including personnel) does not exceed the maximum capacity of the unit.

Also check that the load being lifted is secure and even.

We advise that communication between the hoist operator and the user of the equipment is efficient at all times either via radio or where necessary a third person as a guide.

IMPORTANT

Eichinger Equipment Ltd suggest as good practice that chain slings intended for the lifting of personnel remain on the unit to reduce the possibility of the chain sling being "mis-used".

WARNING

To avoid the risk of injury keep hands and feet clear of the unit at all times during use.

Only use safety handles to manoeuvre the unit during use and only when it is safe to do so. At no time should anyone either trained personnel or otherwise be allowed under the raised load or near enough to be at risk in the event that the load moves.

