


# ELECTRIC CHAIN HOIST

Original instruction

BDH1000

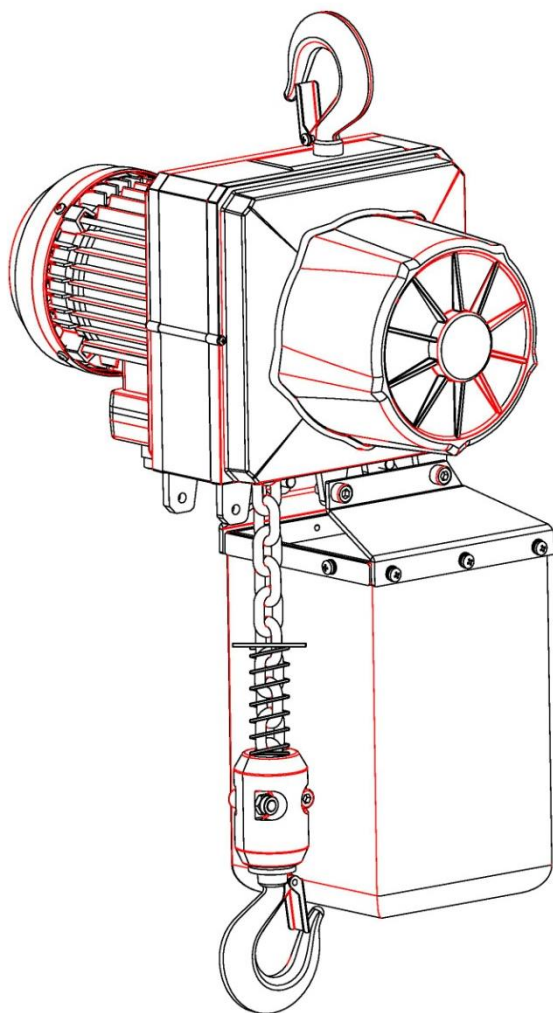

The users must read and understood the Instruction manual completely and clear before operating the hoist.

### **Technical characteristics**

model	BDH1000	model	BDH1000
voltage	230V,50Hz	Input power	1100W
Current	5.0A	Rating lifting	1000kg
Lifting speed	3.2m/min	Lifting height	3m
Speed ratio	177:1	Insulating grade	B
Protecting grade	IP54	Chain diameter	7.1mm
Group of mechanisms	M5	Work rate	S3 35%-10min
Cable tensile strength	≥900N/mm <sup>2</sup>	Net weight	32.5kg

### **Safety instruction**

Keep work area clean.

Cluttered areas and benches invite injuries.

#### **Consider work area environment.**

Do not expose electric tools to rain. Do not use electric

Tools in damp or wet locations.

Keep work area well lit. do not use electric tools near flammable liquids or gases.

#### **Guard against electric shock.**

Prevent body contact with grounded surfaces, shall be sure the hoist with correct earth connection before applied to operation.

#### **Keep children away.**

Do not let visitors contact electric tools or extension cord. All visitors should be kept away from work area.

#### **Store idle tools**

When not in use. electric tools should be stored in a dry, high or locked-up place,

out of the reach of children.

**Use right tools.**

Do not force small electric tools or attachments to do the job of a heavy duty ,it will do a better job and operate more safely at the rate for which it was intended.

Do not use electric tools for other than their intended purpose.

**Dress properly.**

Do not wear loose clothing or jewelers, they can be caught in moving parts, rubber gloves and non-skid footwear are recommended when working outdoors. wear protective hair covering to contain long hair,

**Do not abuse cord.**

Never carry electric tool by cord or yank it to disconnect it from wall outlet. Keep cord from heat, oil and sharp edges.

**Secure work.**

Maintain firm footing or be otherwise secured when operating the hoist ,use tools to hold the workplace , it is safer and frees both hands to operate electric tool .

**Do not overreach.**

Keep proper footing and balance at all times

**Maintain tools with care.**

Keep electric tools sharp and clean for better and safer performance ,follow instructions for lubricating and changing accessories . inspect electric tools cords periodically and, if damaged ,have them repaired by an authorized service facility, inspect extension cords periodically and replace if damaged . keep handles dry, clean and free from oil and grease.

**Avoid unintentional starting.**

Do not carry plugged-in electric tool with finger on switch, be sure that the electric tool is switched off before plugging in

**Outdoor use extension cords.**

When electric tool is used outdoors, use only extensions cords intended for use outdoors and so marked

**Stay alert.**

Watch what you are doing. use common sense .do not operate electric tool when you are tired, distracted or under the influence of drugs, alcohol or medication causing diminished control.

**Check damaged parts.**

Before further use of the electric tool ,a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. not operate a damaged, malfunctioning unusually performing hoist.

**Warning.**

Read and understood the instruction manual completely and clearly, before using the hoist.

Ensure that operator know how the machine works, and how it should be operated.

The user shall always work in compliance with the operating instructions.

The use of any other accessory or attachment other than recommended in the instruction manual present a risk of personal injury.Have your tool repaired by an expert.This electric appliance is built in accordance with the relevant safety rules .repair of electric appliance must only be carried out by experts, otherwise it may cause considerable danger for the user.

**Additional safety rules.**

- 1.Not operate the hoist until you have thoroughly read and understood this instructions manual
2. not lifting more than rated load for the hoist
- 3.not use the hoist with twisted, kinked, damaged, or worn load chain.
- 4.not use the hoist to lift, support, or transport people.
- 5.not operate unless load is centered under hoist,
- 6.not attempt to lengthen the load chain or repair damaged load chain.
- 7.protect the hoist is load chain from weld splatter or other damaging

contaminants.

8. not operate hoist when it is restricted from forming a straight line from hook to hook in the direction of loading.

9. not use load chain as a sling, or wrap chain around load.

10. not apply the load to the tip of the hook or to the hook latch.

11. not apply load unless load chain is properly seated in the chain sprocket.

12. not operate beyond the limits of the load chain travel.

13. not leave load supported by the hoist unattended unless specific have been taken.

14. not operate a hoist unless load slings or other approved single attachments are properly sized and seated in the hook saddle.

15. take up slack carefully-make sure load is balanced and load holding action is secure before continuing.

16. shut down a hoist that malfunctions or performs unusually and report such malfunction.

17. make sure hoist limit switches function properly.

18. warn personnel of approaching load.

19. check brake function by tension hoist prior for each lift operation.

20. avoid swinging the load or hook.

21. make sure hook travel is in the same direction as shown on the controls.

22. inspect the hoist regularly, replace damaged or worn parts, and keep appropriate records of maintenance.

23. not use limit switches as routine operating stops. They are emergency devices only.

24. not allow your attention to be diverted from operating the hoist.

25. not allow your attention to be subjected to sharp contact with other hoist, structures, or objects through misuse.

26. not allowed to use in potentially explosive atmosphere.

27. the value of the equivalent sound emission pressure level at the operator

position is lower than 78db.

28. Supplying power need: voltage  $230V \pm 10\%$ , frequency  $50Hz \pm 1\%$ .

29. The hoist is used at relative humidity below 85%, height above sea below 1000 meters.

30. The hoist's transportation and storage temperature may be above  $-25^{\circ}\text{C}$ , below  $55^{\circ}\text{C}$ . Its highest temperature can not exceed  $70^{\circ}\text{C}$ .


31. Be supplied with a 10 A fuse or 10 A over-current circuit-breaker to protect your electric system.

32. Do not try to lift a fixed or plugged load.

33. Do not lift the load diagonally.

34. Avoid excessive jogging (resulting in a short motor shock).

## CIRCUIT DIAGRAM

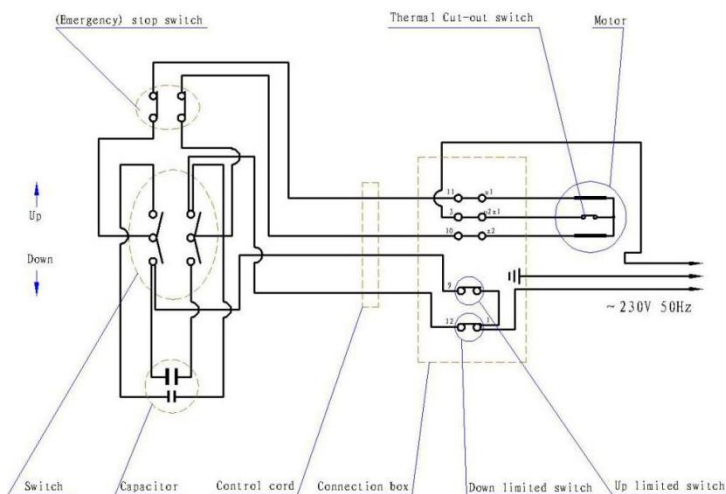


## Use instructions

The electric chain hoist promises a improved work condition and high efficiency, with the limit switch devices, the features of compact structure, light weight, easily

operation and nice appearance.

### **Description(FIG 1)**

1. Hook
2. Gearbox
3. Chain bag
4. Chain hook
5. Electric motor

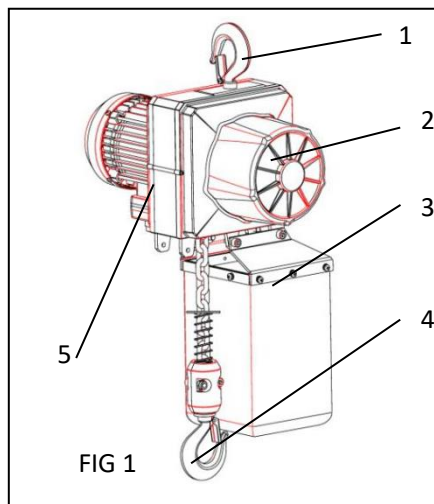

### **Unpacking.**

After opening the carton, carefully inspect the hoist frame, cords ,hooks, CHAIN and control station for damage that may have occurred during shipment.

### **Mounting the hoist.**

Hang the hoist from its intended support. The structure used to support the hoist must have sufficient strength to withstand several times the load imposed.

Suspending the hoist from an inadequate may allow the hoist and to fall and cause injured and/or damage.

### **Checking for adequate voltage at hoist.**

The hoist must be supplied with adequate electrical power for proper operation and to reduce problems that may result from insufficient power(low voltage) . these include:

1. noise hoist operation due to brake and/or contact chatter.
2. Heating of the hoist motor and other internal components as well as heating of wires and connectors in the circuit feeding the hoist.
3. Failure of the hoist to lift the load due to motor stalling.

4. Slowing of motors connected to the same circuit.

**Checking for others.**

After the hoist is suspended from its support and you have made sure the power supply complies with the requirements the hoist is ready for operation.

**Operating instructions.**

1. Check if the (emergency) stop switch is pressed. Turn the red stop switch clockwise to engage.

2. An overload is indicated when the hoist speed slows down, it raises the load in a jerky manner or it will not lift the load at all. Also, some clutching noise may be heard if the hoist is loaded beyond rated capacity. Should this occur, immediately release the “up” button to stop the operation of the hoist. At this point, the load should be reduced to the rated capacity. When the excessive load is removed, normal hoist operation is automatically restored.

3. The hoist is not recommended for use in any application where there is a possibility of adding to an already suspended load to the point of overload. Also if the hoist is used at unusual extremes of ambient temperatures, above 40 °C, or below -9 °C, changes in lubricant properties may present possibility of damage or injury, and in that conditions the work duty is reduced than normal operating conditions.

4. Hoist operation is controlled by depressing the control station push buttons. Depressing the “up” push button will move the load hook toward the hoist; depressing the “down” push button will move the load hook away from the hoist.

5. The “up” and “down” buttons are momentary type and the hoist will operate in the selected direction as long as the button is held in the depressed position. Release the push button and the hoist will stop.

6. When preparing to lift a load, be sure that the attachments to the hook are firmly seated in hook saddle. Avoid off center loading of any kind, especially loading on the point of the hook.



7. When lifting, raise the load only enough to clear the floor or support and check to be sure that attachment to the hook and load are firmly seated. Continue lift only after you are assured the load is free of all obstructions.
8. Do not use this hoist out of its work duty.
9. Stand clear of all loads and avoid moving a load over heads of other heads of other personnel. Warn personnel of your intention to move a load in their area.
10. DO not leave the load suspended in the air unattended.
11. Permit only qualified personnel to operate unit.
12. Do not wrap the load chain around the load and hook on itself as a choker chain.
13. Do not allow a load to bear against the hook latch. The latch is to help maintain the hook in position while the chain is slack before taking up the slack chain.
14. Take up a slack load chain carefully and start load easily to avoid shock and jerking of hoist chain. If there is any evidence of overloading, immediately lower the load and remove the excess load.
15. When the push button is pressed, the machine will stop.

### **Periodic inspection**

To maintain continuous and satisfactory operation, a regular inspection procedure must be initiated so that worn or damaged parts can be replaced before they become unsafe, the intervals of inspection must be determined by the individual application and are based upon the type of service to which the hoist will be subjected.

Periodic inspections are to be performed semi-annually and they should include the following:

1. external evidence of loose screws.
2. external evidence of worn, corroded, cracked or distorted hook fixing block, gears, bearings, chain stop ball and hook retainer.
3. external evidence of damage or excessive wear of the lift-wheel. Widening and

deepening of pockets may cause chain to lift-up in the pockets and cause binding between lift-wheel and chain guide or between lower sheave and hook block. Check chain guide for wear or burring where the chain enters the hoist .severely worn or damaged parts should be replaced.

4.external evidence of excessive wearing of brake parts. Check the control station push buttons to make sure they operate freely and spring back when released.

5.check power cord, control cord and control station for damaged insulation.

6.check the chain pin or dead end pin and chain stop for wear and cracks.

Any deficiencies noted must be corrected before the hoist is returned to service.

### **Hook inspection**

Hook damaged for chemicals, deformations or cracks or than have more than a 10°, twist from the plane of the unbent hook or excessive throat opening indicates abuse or overloading of the unit.

Check to make sure that the latch is not damaged or bent and that it operates properly with sufficient spring pressure to keep the latch tightly against the lip of the hook and allow the latch to spring back to the tip when released. If the latch does not operate properly, it should be replaced.

### **Chain inspection.**

Nicks, gouges, twisted links , weld spatter, corrosion pits, striations, cracks in weld areas, wear and stretching. Chain with any one of these defects must be replaced.

Lubricate the chain using 3#calcium-based grease after 200 per cycles. Life of chain is 50000cycles.

Slack the portion of the chain that


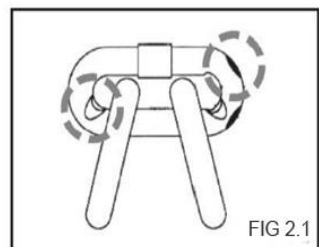


FIG 2.1

normally passed over the lift-wheel.  
examine the interlink area for the point of maximum wear. Measure and record the stock diameter at this point of the link. Then measure stock diameter in the same area on a link that does not pass over the lift wheel (use the link adjacent to the loose end link for this purpose). Compare these two measurements. If the stock diameter of the worn link is 0.254 mm(or more).

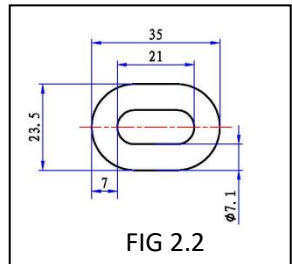

Less than the stock diameter of the unworn link, the chain must be replaced.  
The chain length is 3 meters and it has 143 Knots.FIG 2.2 is specific dimensions of the chain

### **Lubrication**


The gears are packed at assembly with grease and should not need to be renewed unless the gears have been removed from the housing and the grease is removed.

### **Bearing.**


Rotor bearings are lubricated and require no lubrication. Needle bearings are packed at assembly with grease and should not to be re-lubricated. However, if the housings, lift-wheel or sheave wheel have been decreased, these bearing should be greased using lithium grease.


### **Load chain removal/installation(FIG3& FIG4 &FIG5).**

1. remove the chain bag(FIG 3)

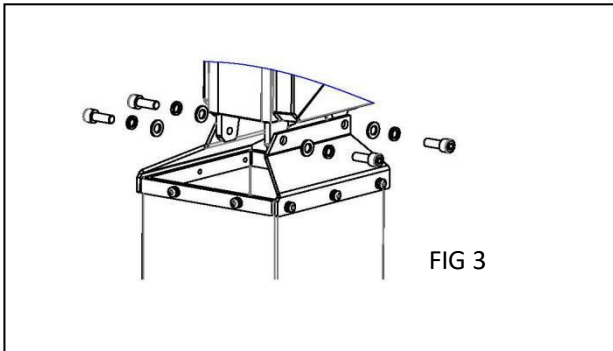

2. remove the hook lock(FIG 4). Depress “up” button and run chain out of the hoist.
3. Jog the “down” push button while pulling on the new chain until the old chain comes out of the hoist.
4. Attach the hook block to the new chain.
5. Remove the chain stop ball from the old chain(FIG 5) and attach it to the new chain by reusing the chain pin.

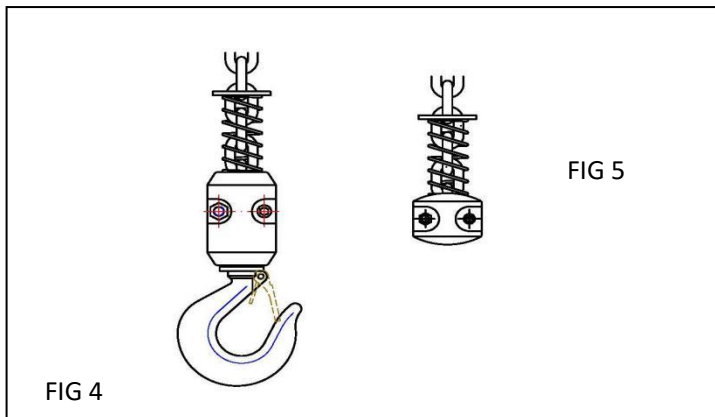

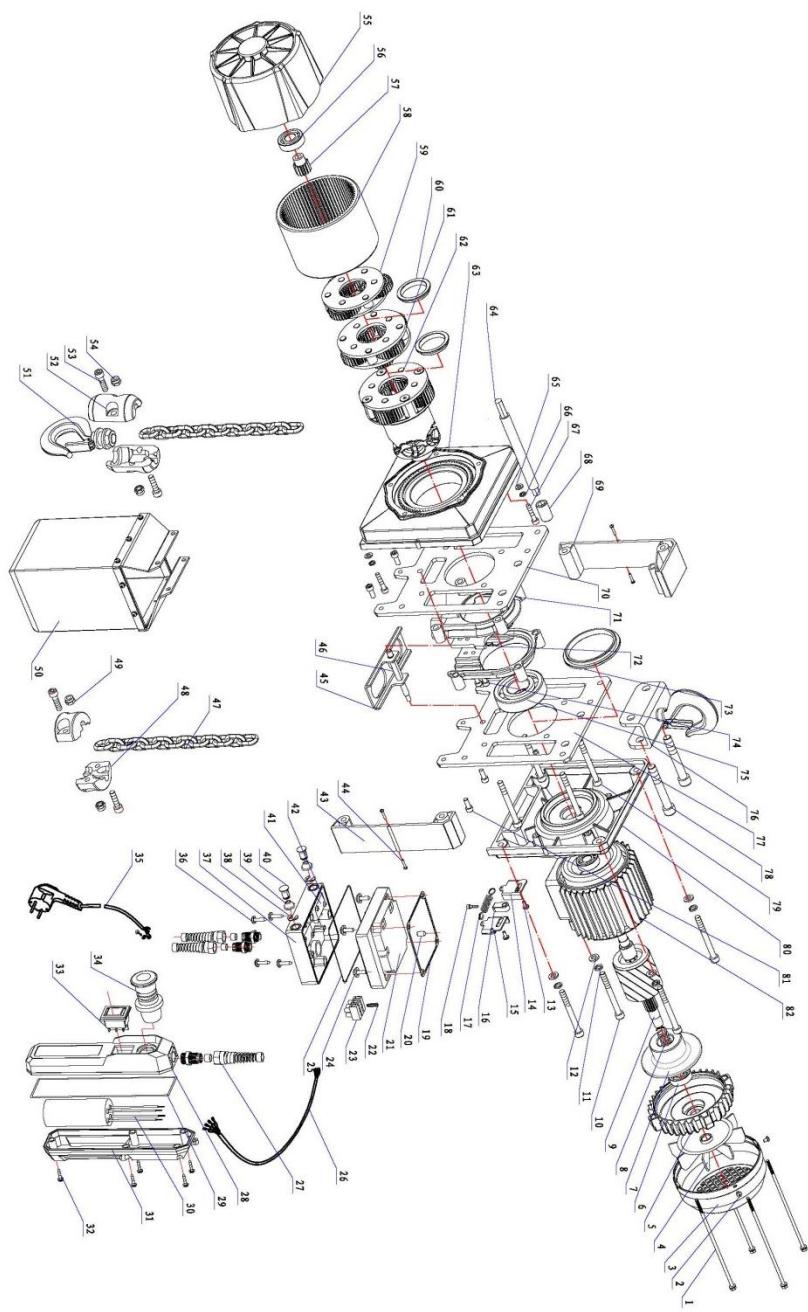

### Part list of chain hoist BDH1000

No.	Part name	Qty.	No.	Part name	Qty.
1	Assembly of Hex head bolts	4	42	Cross recessed pan head tapping screws	4
2	Cross recessed pan head screws	2	43	Fixing rack A	1
3	Fan cover	1	44	Cross recessed pan head tapping screws	4
4	Fan blade	1	45	Limit lever	1
5	Motor cover	1	46	Limit lever shaft	1
6	Bearing	2	47	Chain	1
7	Brake assembly	1	48	Chain fixed block	2
8	Brake spring	1	49	Prevailing torque type hexagon nut	5
9	Rotor	1	50	Chain bag assembly	1
10	Hexagon socket head cap screws	4	51	Hook	1
11	Spring washers	4	52	Hook block	2
12	Plain washers	4	53	Hexagon socket head cap screws	2
13	Cross recessed pan head screws	2	54	Prevailing torque type hexagon nut	2
14	Lower limit plate	1	55	Cover	1
15	Up limit plate	1	56	Bearing	1
16	Limiting head	1	57	driving gear 1	1
17	Spring	1	58	ring gear	1
18	Hexagon socket head cap screws	1	59	planet gear 1	1
19	seal of base connection box	1	60	sleeve of planet gear 1	2
20	hex socket screw	1	61	planet gear 2	1
21	Base of connection box	1	62	planet gear 3	1
22	Cross recessed pan head tapping	1	63	Front cover	1
23	places terminal block	1	64	Drive shaft	1
24	Cross recessed pan head screws	4	65	Plain washers	5
25	seal of connection box	1	66	Spring washers	5
26	Cross recessed pan head tapping screw	1	67	Hexagon socket head cap screws	7
27	Cord clip	3	68	Sleeve of drive shaft	1
28	Controlling handle (cover)	1	69	fixing rack B	1
29	Handle sealed loop	1	70	Plate of gear box	1
30	Capacitor	1	71	Chain shelf	2
31	Controlling handle (base)	1	72	Chain baffle	1
32	Cross recessed pan head tapping screw	5	73	sleeve of chain wheel	1
33	Positive and negative switch	1	74	Hexagon socket head cap screws	2
34	Emergency stop switch	1	75	Bearing	1
35	Plug	1	76	Hook	1
36	Cross recessed pan head tapping screw	4	77	Plate of motor	1
37	Connection cover	1	78	Hexagon socket head cap screws	2
38	"E" rings d8	2	79	Hexagon socket head cap screws	4
39	Limit shaft seal	2	80	Front of motor	1
40	Limit shaft	2	81	Hexagon socket head cap screws	4
41	Limit switch	2	82	Motor	2